

Configuration Guide
Document Version: 1.5.9 – 2018-09-12

CUSTOMER

How to Configure Hardware Platforms for SUSE Linux Enterprise Server

All Countries



Typographic Conventions

Type Style	Description
Example	Words or characters quoted from the screen. These include field names, screen titles, pushbuttons labels, menu names, menu paths, and menu options. Textual cross-references to other documents.
Example	Emphasized words or expressions.
EXAMPLE	Technical names of system objects. These include report names, program names, transaction codes, table names, and key concepts of a programming language when they are surrounded by body text, for example, SELECT and INCLUDE.
Example	Output on the screen. This includes file and directory names and their paths, messages, names of variables and parameters, source text, and names of installation, upgrade and database tools.
Example	Exact user entry. These are words or characters that you enter in the system exactly as they appear in the documentation.
<Example>	Variable user entry. Angle brackets indicate that you replace these words and characters with appropriate entries to make entries in the system.
EXAMPLE	Keys on the keyboard, for example, F2 or ENTER .

Document History

Version	Date	Change
1.0	2014-04-14	First version
1.1	2014-05-05	Huawei servers certified for use with SAP Business One products powered by SAP HANA
1.2	2014-07-28	IBM configuration changes
1.3	2014-12-02	<ul style="list-style-type: none">• Add configurations for Dell R920 and IBM x3850 X6• Update Fujitsu configuration from RAID 1/RAID 0 to RAID 5
1.4	2015-03-06	<ul style="list-style-type: none">• Add configurations for Dell R630, T630, R730, and T730• Increase the Dell boot partition to 53 GB
1.4.1	2015-03-31	Increase the boot partition of all models to 53 GB
1.4.2	2015-05-04	Correct the instructions for Dell R630/T630/R730/T730: One disk must be reserved for hot spares.
1.5.1	2015-07-03	<ul style="list-style-type: none">• Add configurations for Fujitsu Primergy RX 2540 M1, RX2560 M1, TX2560 M1• Remove references to Fujitsu pre-installation
1.5.2	2015-08-24	<ul style="list-style-type: none">• Add configurations for Dell R630, T60, R730, and T730• Add configurations for HPE ProLiant DL360/DL380/ML350 Gen9
1.5.3	2015-11-16	<ul style="list-style-type: none">• Add configurations for System x AND Lenovo ThinkServer• Merge IBM and Lenovo chapters
1.5.4	2016-04-26	<ul style="list-style-type: none">• Add Dell R930 configuration• Add Lenovo x3550 M5 configuration
1.5.5	2016-11-11	<ul style="list-style-type: none">• Update for Broadwell configurations (Fujitsu , Dell, Lenovo)• Restructure Lenovo chapter
1.5.6	2017-04-08	<ul style="list-style-type: none">• Change HPE power management settings
1.5.7	2018-04-10	Add reference to hardware configurations for Huawei servers
1.5.8	2018-08-15	Add configurations for HPE ProLiant DL360 Gen10 servers
1.5.9	2018-09-10	Add configurations for Dell PowerEdge R640, T640, R740, R740xd and R940

Table of Contents

1	Introduction.....	5
2	Lenovo (Formerly IBM) Servers.....	6
2.1	Defining BIOS Settings.....	6
2.2	Configuring Storage	7
3	HPE Servers.....	15
3.1	Defining BIOS Settings.....	15
3.2	Configuring Storage	15
4	Dell Servers	19
4.1	Defining BIOS Settings.....	19
4.2	Configuring Storage	19
5	Fujitsu Servers	27
5.1	Defining BIOS Settings.....	27
5.2	Configuring Storage	27
6	Huawei Servers.....	31

1 Introduction

The SAP HANA database for SAP Business One products (SAP Business One, version for SAP HANA and SAP Business One analytics powered by SAP HANA) runs on SUSE Linux Enterprise Server (SLES). The following vendors are certified to provide server hardware for SLES:

- Lenovo (formerly IBM)
- HPE
- Dell
- Fujitsu
- Huawei

For details on the certified configurations, please consult the [Certified SAP HANA Hardware Directory](#) and filter for appliance type "SAP Business One".

When configuring your hardware platform, you can refer to the instructions in the section corresponding to your hardware vendor.

 Caution

Deviations from the documented and certified RAID configurations that change (reduce) the storage capacity or I/O characteristics are not allowed. Adding extra hot spare disks is allowed because it does not affect the storage size or the I/O performance.

2 Lenovo (Formerly IBM) Servers

2.1 Defining BIOS Settings

Follow the procedure below to optimize the server performance based on the included table:

1. In the UEFI/BIOS, select [System Settings](#).
2. Select the appropriate Subsection, Setting and Value from the table below.
 - o Pay attention to the platform for which the parameter applies.

Subsection	Setting	Value	Platform
Operating Modes	Choose Operating Mode	Performance Mode	Sandy Bridge (S)
Operating Modes	Choose Operating Mode	Custom Mode	Haswell (H), Broadwell (B)
Operating Modes	Hyper Threading	Enable	S
Processors	QPI Speed	Max Performance	S
Memory	Memory Mode	Independent	H,B
Memory	Memory Speed	Max Performance	H,B
Memory	Memory Power Management	Automatic	H,B
Memory	Patrol Scrub	Enable	S,H,B
Processors	Processor Performance States	Enable	H
Processors	CPU P-state Control	None	B (E5 processors)
Processors	CPU P-State Control	Legacy	B (E7 processors)
Processors	C1 Enhanced Mode	Disable	H,B
Processors	QPI Link Frequency	Max Performance	H,B
Processors	Turbo Mode	Enable	H,B
Processors	CPU States	Enable	H
Processors	C-States	Legacy	B
Processors	Package ACPI C-State Limit	ACPI C3	H,B
Power	Power/Performance Bias	Platform Controlled	H,B
Power	Platform Controlled Type	Max Performance	H,B

3. Choose **ESC** to return to the settings menu. Continue with the remaining parameters.

4. Choose [ESC](#) to return to the main menu.

2.2 Configuring Storage



Caution

Proper RAID configuration with one virtual device and two virtual drives per system is vital for successful SAP software installations.

Lenovo System x3650 M5, x3550 M5 based on Intel V4 Family (Broadwell)

The servers based on the Intel Xeon v4 (Broadwell) family of processors are configured with an all flash or hybrid storage layout. The all flash design is equipped with a set of enterprise solid state disks (SSD) drive technology. The hybrid design used SSD disks to improve the performance of the classical spinning disk (HDD) technology. Both designs will store all SAP HANA shared file systems, including data, log and shared. There is no external storage attached.

The all flash design provides a hardware-based RAID virtual device with two virtual drives for the operating system and for SAP HANA. The hybrid design uses a hardware-based caching mechanism based on ServeRAID CacheCade technology.

SAP Business One, version for SAP HANA now allows a flexible storage configuration. The values given in the tables below are the starting configurations. You may use up to a total of 8 disks (SSD and HDD included) to provide enough space for installation of your SAP Business One, version for SAP HANA. The installation by SUSE Linux Enterprise Server assumes that you have two drives available for a single operating system image.

Feature on Demand Activation

To be able to configure the RAID adapters correctly, some Feature on Demand (FoD) keys need to be installed and activated before continuing. It is possible that they are already activated when shipped.

- ServeRAID M5100/M5200 Series Performance Key for Lenovo System x (required for all solutions)
- ServeRAID M5100/M5200 Series SSD Caching Enabler for Lenovo System x (required for hybrid solution)

The necessary documentation was shipped with the servers to the customer. You can activate the FoD keys via the IMM. After a login to the IMM, go to [IMM Management](#) > [Activation Key Management](#) to install and activate the FoD keys.

What follows are the storage configurations based on SAP Business One user count and Memory configurations servers based on these designs.


System x M5 All Flash Intel Xeon Broadwell EP Models							
B1 Users	25	50	75	100	150	200	250
Memory	64	128	192	256	384	512	768
SSD3	4 × 200GB SSD	4 × 200GB SSD	5 × 200GB SSD	5 × 400GB SSD	4 × 800GB SSD	4 × 800GB SSD	2 × 3.84TB SSD

System x M5 Cached Spinning Disk Intel Xeon Broadwell EP Models							
B1 Users	25	50	75	100	150	200	250
Memory	64	128	192	256	384	512	768
HDD	3 × 1.2TB HDD	3 × 1.2TB HDD	3 × 1.2TB HDD	3 × 1.2TB HDD	5 × 1.2TB HDD	5 × 1.2TB HDD	5 × 1.2TB HDD
SSD	2 × 200GB SSD	2 × 200GB SSD	2 × 200GB SSD	2 × 200GB SSD	2 × 200GB SSD	2 × 200GB SSD	2 × 200GB SSD


System x X6 All Flash Intel Xeon Broadwell EX Models							
B1 Users	50	75	100	150	200	250	300
Memory	128	192	256	384	512	768	1024
SSD3	4 × 200GB SSD	5 × 200GB SSD	5 × 400GB SSD	4 × 800GB SSD	4 × 800GB SSD	2 × 3.84TB SSD	2 × 3.84TB SSD

System x X6 Cached Spinning Disk Intel Xeon Broadwell EX Models							
B1 Users	50	75	100	150	200	250	300
Memory	128	192	256	384	512	768	1024
HDD	6 × 1.2TB HDD	6 × 1.2TB HDD	6 × 1.2TB HDD	6 × 1.2TB HDD	6 × 1.2TB HDD	6 × 1.2TB HDD	6 × 1.2TB HDD
SSD	2 × 200GB SSD	2 × 200GB SSD	2 × 200GB SSD	2 × 200GB SSD	2 × 200GB SSD	2 × 200GB SSD	2 × 200GB SSD

RAID configuration for

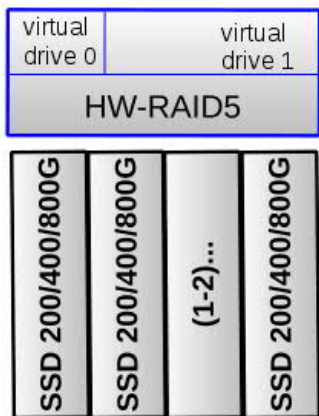


System x M5 and

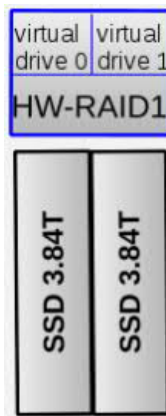

X6 all flash storage

RAID configuration for System x M5 and X6 (Broadwell) with cached spinning disk storage

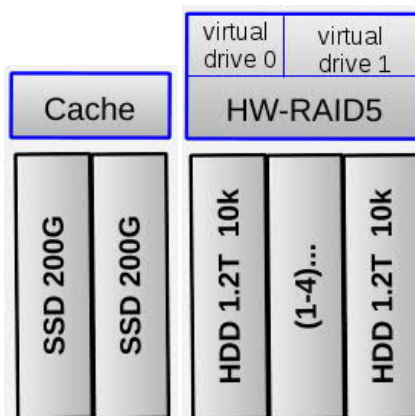

Lenovo System x3650 M5, x3550 M5, x3500 M5 and ThinkServer RD650, RD550 based on Intel V3 Family (Haswell)


The servers based on the Intel Xeon v3 (Haswell) family of processors are equipped with a set of 10k SAS HDD spinning drive technology. These internal HDDs will store all SAP HANA shared file systems, including data, log and shared. There is no external storage attached.

What follows are the storage configurations based on SAP Business One user count and Memory configurations servers based on these designs.

System x M5 & ThinkServer Spinning Disk Intel Haswell EP Models					
Model	64	128	256	384	512
HDD Option 1	4 × 300GB HDD	4 × 300GB HDD	6 × 300GB HDD	8 × 300GB HDD	8 × 300GB HDD
HDD Option 2	4 × 1.2TB HDD	4 × 1.2TB HDD	4 × 1.2TB HDD	4 × 1.2TB HDD	4 × 1.2TB HDD

System x X6 Spinning Disk Intel Xeon Haswell EX Models						
Model	128	256	384	512	768	1024
HDD	5 × 1.2TB HDD	5 × 1.2TB HDD	5 × 1.2TB HDD	5 × 1.2TB HDD	7 × 1.2TB HDD	7 × 1.2TB HDD

RAID configuration for System x M5 and X6 (Haswell) with HDD storage

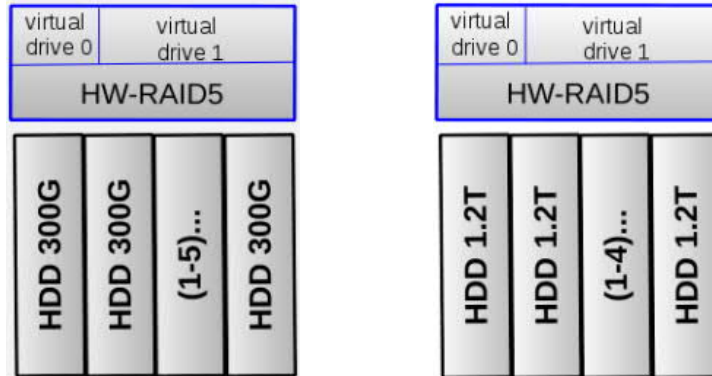


IBM System x3650 M4, x3550 M4 and x3500 M4 based on Intel Xeon E5-2670 Processors (Sandy Bridge)

The servers based on the Intel Xeon E5 (Sandy Bridge) processors are equipped with 120-GB or 240-GB Enterprise Entry SSD drives. These internal SSDs will store all SAP HANA file systems, including data, log and shared. There is no external storage.

What follows are the storage configurations based on SAP Business One user count and Memory configurations servers based on these designs.

SSD Disk Intel Xeon Sandy Bridge EP Models				
Model	64	96	128	256
SSD	8 × 120GB	8 × 120GB	8 × 120GB	8 × 240GB

RAID configuration for System x M4 (Sandy Bridge) with SSD storage

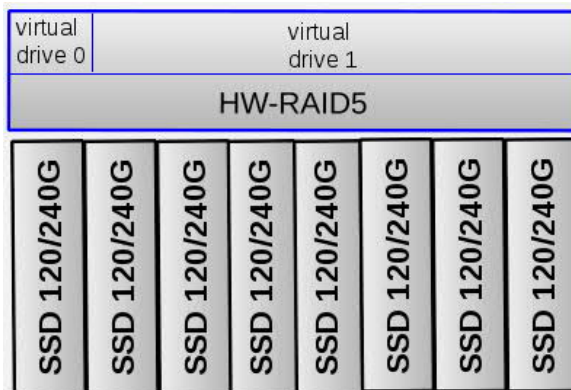

Lenovo Cache Setup of ServeRAID M5210 for Lenovo Servers

If you plan to configure a hybrid storage layout for the Lenovo System x M5 or X6 systems based on Intel Xeon Broadwell processors, configure first the ServeRAID CacheCade settings of the ServeRAID M5210 adapter as follows:

1. In the UEFI/BIOS, select the following menu entries depending on the server model:
2. System x:
 - o Select [System Settings](#)
 - o Select [Adapters and UEFI Drivers \(or Storage\)](#)
 - o Select the [LSI MegaRAID <ServeRAID M5210>](#) adapter attached to the storage to be configured
3. Select [Main Menu](#)
4. Select [Configuration Management](#)
5. If an existing configuration exists, select [Clear Configuration](#) to delete it
6. Select [Save Configuration](#) and then [Confirm \[X\]](#)
7. Select [Yes](#) and then [OK](#)
8. Select [Configuration Management](#)
9. Select [Create CacheCade Virtual Drive](#)
10. Select [RAID Level: RAID1](#)
11. Select [Write Cache Policy: Write Back](#)
12. Select the two listed SSD drives using [Check All](#)
13. Select [Create CacheCade Virtual Drive](#)
14. To confirm your selection, select [OK](#)
15. Select [Save Configuration](#) and then [Confirm \[X\]](#)
16. Select [Yes](#) and then [OK](#)
17. Exit the configuration management
18. Now begin to configure the storage setup below

Lenovo Storage Setup for ServeRAID M5210 / AnyRAID 720i(x) Adapters for Lenovo and IBM Servers

To configure the RAID settings of the ServeRAID M5210 and AnyRAID 720i(x) RAID controllers, proceed as follows:

1. In the UEFI/BIOS, select the following menu entries depending on the server model:
 - System x:
 - o Select [System Settings](#)
 - o Select [Adapters and UEFI Drivers \(or Storage\)](#)
 - o Select the [LSI MegaRAID <ServeRAID M5210>](#) adapter attached to the storage to be configured
 - o Select [Main Menu](#)
 - ThinkServer:
 - o Select [Boot Manager](#)
 - o Select [Adapters and UEFI Drivers](#)
 - o Select the [LSI EFI SAS Driver](#) adapter attached to the storage to be configured
2. Select [Configuration Management](#)
3. If an existing configuration exists, select [Clear Configuration](#) to delete it

4. Select [Create Virtual Drive](#)
5. Select the appropriate [RAID Level](#):
 - o [RAID1](#) for 3.84 TB Enterprise Capacity drives (Intel Xeon [Broadwell](#) all flash configurations)
 - o [RAID5](#) for all other configurations
6. Select [Drives From: Unconfigured Capacity](#) Make sure that the following properties are selected for the virtual drives:
 - o [Virtual Drive Size: 53 GB](#)
 - o [Stripe Size: 256 KB](#)
 - o [Read Policy: Read Ahead](#)
 - o [Write Policy: Write Back](#)
 - o [I/O Policy: Cached](#)
 - o [Access Policy: Read/Write](#)
 - o [Drive Cache: Enable](#)
 - o [Disable Background: No](#)
7. Select [Drives](#)
8. Select [Check All](#)
9. Select [Apply Changes](#)
10. To confirm your selection, select [OK](#)
11. Save the Configuration
 - o System x: Select [Save Configuration](#) and then [Confirm \[X\]](#)
 - o ThinkServer: [Select Confirm \[Enabled\]](#)
12. Select [Yes](#) and then [OK](#)
13. To add the second virtual drive, select [Create Virtual Drive](#)
14. Select [RAID Level: RAID5](#)
15. Select [Drives From: Free Capacity](#)
16. System x: Select [Drive Group 0: RAID5 \[X\]](#)
ThinkServer: [Select Drive Group 0: RAID5 \[Enabled\]](#)
17. Make sure that the following properties are selected for the virtual drives:
 - o [Virtual Drive Size: remaining capacity](#)
 - o [Stripe Size: 64 KB](#)
 - o [Read Policy: Read Ahead](#)
 - o [Write Policy: Write Back](#)
 - o [I/O Policy: Cached](#)
 - o [Access Policy: Read/Write](#)
 - o [Drive Cache: Enable](#)
 - o [Disable Background: No](#)
18. Select [Apply Changes](#) and then [OK](#)
19. Select [Save Configuration](#)
20. System x: Select [Confirm \[X\]](#) , then [Yes](#), then [OK](#)
ThinkServer: Select [Confirm \[Enabled\]](#), then [Yes](#), then [OK](#)

-
21. If using the ServeRAID CacheCache Virtual Drive to improve HDD performance:
Select [Virtual Drive Operations](#)
 1. Select [Virtual Drive](#) to be used for the SAP HANA partition (with remaining capacity)
 2. Select the Operation [Enable SSD Caching](#)
 3. Select [Go](#) and then [OK](#)
 22. While the virtual drives are being initialized in the background, the installation can proceed
 23. Exit the configuration management
 24. Exit UEFI/BIOS with "[Y](#)" to save, and continue with booting the server

IBM Storage Setup for ServeRAID M5110 Adapters on IBM System x M4 servers

To configure the ServeRAID settings of the M5110 RAID controller, proceed as follows:

1. In the UEFI/BIOS, select [System Settings](#)
2. Select [Adapters and UEFI Drivers](#)
3. Select [LSI EFI SAS Driver](#) in the list
4. Select [WebBIOS](#)
5. One RAID controller has already been selected. Keep the selection and choose [Start](#)
6. Select [Configuration Wizard](#)
7. Select [New Configuration](#)
8. Select [Yes](#) to clear the existing configuration
9. Select [Manual Configuration](#)
10. Select [Redundancy when possible](#)
11. Select [Drive Security Method: No Encryption](#)
12. Select [Data Protection: Disabled](#)
13. For the IBM x3500 M4 / x3550 M4 model with 128-GB RAM, select all 8 drives (slots 0-7), and then select [Add to Array](#)
For the IBM x3500 M4 / x3550 M4 model with 256-GB RAM, select all 13 128-GB drives (slots 0-12) or all 8 240-GB drives (slots 0-7), and then select [Add to Array](#)
14. Select [Accept DG](#)
15. Select [Next](#)
16. Select [Add to Span](#)
17. Select [Next](#)
18. Specify the capacity ([53 GB](#)) for the first virtual drive. This drive will be used for the operating system and swap space
19. Select [Accept](#)
20. Select [Yes](#) for [Write Back with BBU](#) mode
21. Select [Back](#) to configure the next virtual drive
22. Select [Add to Span](#)
23. Select [Next](#)
24. Select [Update Size](#)
25. Allocate the remaining capacity to the second virtual drive. This drive will be used for storing the SAP application data
26. Select [Accept](#)

-
27. Select **Yes** for **Write Back with BBU** mode
 28. Select **Next**
 29. Select **Accept**
 30. Select **Yes** to save the configuration
 31. Select **Cancel** for **SSD Caching**
 32. Select **Yes** to initialize the virtual drives
 33. Make sure that the following properties are selected for the virtual drives:
 - o **RAID Level:5**
 - o **Stripe Size: 128 KB**
 - o **Access: RW**
 - o **Read: Always Read Ahead**
 - o **Default Write: Write Back with BBU**
 - o **Disable BGI: No**
 - o **I/O: Direct**
 - o **Disk Cache: Unchanged**
 - o **Advanced Properties, SSD Cache: Disable**
 34. While the virtual drives are being initialized in the background, the installation can proceed
 35. Exit WebBIOS
 36. Exit UEFI/BIOS with **"Y"** to save, and continue with booting the server

3 HPE Servers

3.1 Defining BIOS Settings

HPE ProLiant ML350p Gen8 and DL360/DL380/ML350 Gen9

1. Disable ASR by choosing [Server Availability](#) → [ASR Status](#) → [Disabled](#).
2. Set the power profile to "OS Controlled" by choosing [Power Management](#) → [Power Profile](#) → [Custom](#), then select [Power Regulator](#) → [OS Controlled Mode](#).

HPE ProLiant DL360 Gen10

HPE recommends the following BIOS settings:

[Workload Profile](#): General Peak Frequency Compute

[ASR status](#): Disabled

[Processor_x2APIC_Support](#): Disabled

[Intel VT](#): Disabled

[Intel VT-d](#): Disabled

[SR-IOV](#): Disabled

[Boot Mode](#): UEFI Mode

[Power Regulator](#): Static High Performance Mode

[Energy/Performance Bias](#): Maximum Performance

Note

Make sure you have installed the latest firmware for BIOS, the Smart Array controller, network cards, and hard drives.

For more information, see the user guide for HPE ProLiant Gen10 servers:

http://h20566.www2.hp.com/hpsc/doc/public/display?sp4ts.oid=1009955118&docLocale=en_US&docId=emr_na-a00016407en_us.

3.2 Configuring Storage

HPE ProLiant ML350p Gen8 and DL360/DL380/ML350 Gen9


The ProLiant ML350p Gen8 model for SAP HANA is equipped with a Smart Array P420 RAID controller and 8 x 300 GB HDDs, which store both the SAP HANA log and the data.

The ProLiant DL360/DL380/ML350 Gen9 model for SAP HANA is equipped with a Smart Array P440ar RAID controller and 8 x 600 GB HDDs, which store both the SAP HANA log and the data.


There is no external storage.

Once the system is installed, there is a hardware-based RAID50 with two virtual disks for the operating system and for SAP HANA.

Configuration for ProLiant ML350p Gen8, 300-GB memory, 8 HDDs

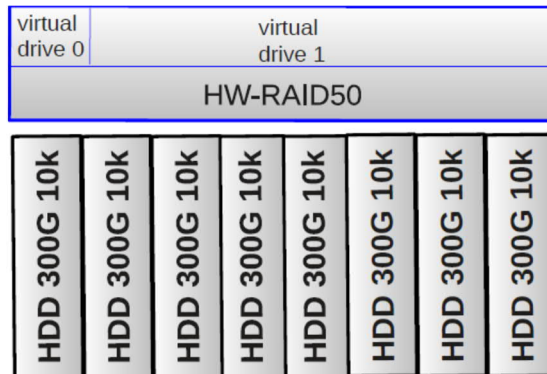

Configuration for ProLiant DL360/DL380/ML350 Gen9, 600-GB memory, 8 HDDs

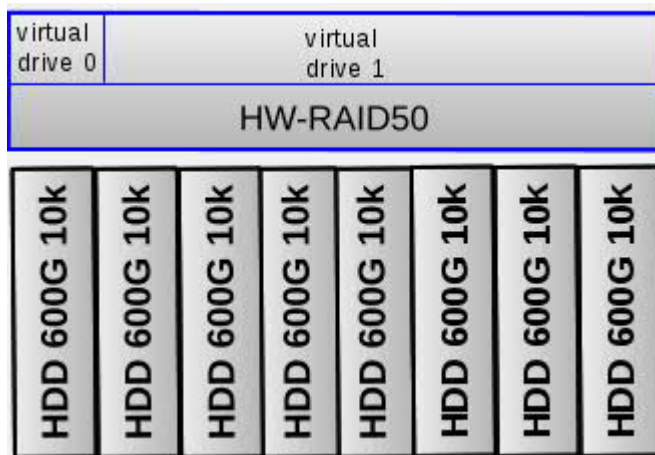

To configure the Smart Array P420 (or P440ar) RAID controller, proceed as follows:

 Caution

Proper RAID configuration with two virtual drives is vital for successful SAP software installations.

1. Boot the machine.
2. During the boot process, press **F5** to enter the Array Configuration Utility (ACU).
3. Select **Smart Array P420** in slot x.
4. Select **Create Array**.
5. Select all 8 drives.
6. Select **OK**.
7. Select **Create Logical Drive** (or **Create Array**).

8. Specify the properties as follows:
 - o Fault Tolerance (or RAID Level): **RAID50**
 - o NPG:**2**
 - o Stripe Size:**256 KB**
 - o Sectors/Tracks:**32**
 - o Size: **Other** (or **Custom Size**) → **53 GB**
 - o Caching: **Enabled**
9. Select **Save** (or **Create Logical Drive**). This drive will be used for the operating system and swap space.
10. Create a second drive by repeating steps 6 to 8 and choosing **Max Size** for **Size**.
This drive will be used for the SAP application data.
11. Select **Exit ACU** (or **Finish**).
12. Reboot the machine.

HPE ProLiant DL360 Gen10

The ProLiant DL360 Gen10 model for SAP HANA is equipped with a Smart Array P816i-a RAID controller and 10 disks, 7 x 1.8TB HDDs and 3 x 400GB SSDs, which store both the SAP HANA log and the data.

Configuration for ProLiant DL360 Gen10

virtual drives 1-4			virtual drive 5				CACHE		
HW RAID 5			HW RAID 5				HW RAID 5		
HDD 1.8TB 10k	HDD 1.8TB 10k	HDD 1.8TB 10k	HDD 1.8TB 10k	HDD 1.8TB 10k	HDD 1.8TB 10k	HDD 1.8TB 10k	SSD 400GB	SSD 400GB	SSD 400GB

To configure the HPE Smart Array P816i-a RAID controller, proceed as follows:



Caution

Proper RAID configuration with five virtual drives on two arrays is vital for successful SAP software installations.

1. Boot the machine.
2. During the boot process, press **F10** to enter **Intelligent Provisioning**.
3. Select **Smart Storage Administrator**.
4. Select **HPE Smart Array P816i-a SR Gen10**.
5. Select **Configure**.
6. Select **Create Array** to create the first array.
 1. Select 3 HDDs.
 2. Select **Create Array**.
 3. Create 4 logical drives on the array with the following properties:

- o RAID Level: **RAID 5**
- o Size: set the sizes of Logical Drive 1 to 4 to **Custom Size** of **256GB, 512GB, 1536GB**, and **65GB**, respectively.

Logical Drive 1 will be used for the operating system and swap space.

Logical Drive 2 will be used for the SAP-related file system "/hana/log".

Logical Drive 3 will be used for the SAP-related file system "/hana/shared".

Logical Drive 4 will be used for the SAP-related file system "/usr/sap/".

4. Select **Finish**.
7. Select **Create Array** to create the second array with the 4 remaining HDDs. Create one logical drive (Logical Drive 5), which will be used for the SAP-related file system "/hana/data", on the array and specify its properties as follows:
 - o RAID Level: **RAID 5**
 - o Size: **Maximum Size**

Select **Finish**.



The steps for creation of the five virtual drives must be strictly followed, because the subsequent cache assignment and installation of SUSE Linux Enterprise Server rely on these drive numbers.

8. Select **Cache Manager**.
 1. Enable **HPE Smart Cache**.
 2. Select all 3 SSDs.
 3. Select **Logical Drive to Cache - Logical Drive 5** and set its size to **Recommended Size**.
 4. Select **Create SmartCache for Logical Drive**
 5. Select **Logical Drive to Cache - Logical Drive 2** and set its size to **Maximum Size**.
 6. Select **Create SmartCache for Logical Drive**
 7. Select **Finish**.
9. Reboot the machine.

4 Dell Servers

4.1 Defining BIOS Settings

Dell PowerEdge R620 and T620

1. Boot the machine.
2. During the boot process, press **F2** to enter the system setup.
3. In the main menu, choose **System BIOS** and then choose **Integrated Devices**.
4. Choose **Disable** for the internal SD card port.

 Note

This option is available only if IDSDM (Internal Dual SD Module) is installed on the system board.

5. Choose **Back** and then **Finish**.
6. To save your changes, choose **Yes**.
7. Choose **Finish**.
8. To confirm to leave the system setup, choose **Yes**.

Dell PowerEdge R640, T640, R740, R740xd, R910, R920, R930 and R940

Keep the default BIOS settings.

4.2 Configuring Storage

The DELL PowerEdge R620 and T620 models for SAP HANA are each equipped with an H710P RAID controller and 8 300-GB disks.

The DELL PowerEdge R910 model for SAP HANA is equipped with an H710P RAID controller and 14 300-GB disks. The operating system and the SAP HANA data require separate RAID configurations from the SAP HANA log on each model. On each model, RAID configurations for the operating system and the SAP HANA data must be different from the RAID configurations for the SAP HANA log.

The DELL PowerEdge R920 model for SAP HANA is equipped with an H730P RAID controller and 10 900-GB disks.

The DELL PowerEdge R930 model for SAP HANA is equipped with an H730P RAID controller and 9 1200-GB disks.

The DELL PowerEdge R630, T630, R730, T730 models for SAP HANA are equipped with an H730P RAID controller and 8 600-GB disks.

The DELL PowerEdge R640, T640, R740, R740xd, R940 models for SAP HANA are equipped with an H730P/H740P RAID controller and a varying number of disks, depending on the size of the machine (see the section PowerEdge R640, T640, R740, R740xd, R940 (Based on Skylake CPUs) in this chapter).

There is no external storage.

 **Caution**


Proper RAID configuration with two virtual drives is vital for successful SAP software installations.

PowerEdge R620 and T620

Dell PowerEdge R620 and T620 require the following configuration:

- Hardware-based RAID5 with 6 disks for the operating system and for the SAP HANA data
- Hardware-based RAID0 for each individual disk of the 2 virtual drives for the SAP HANA log

Configuration for R620/T620, 8HDDs

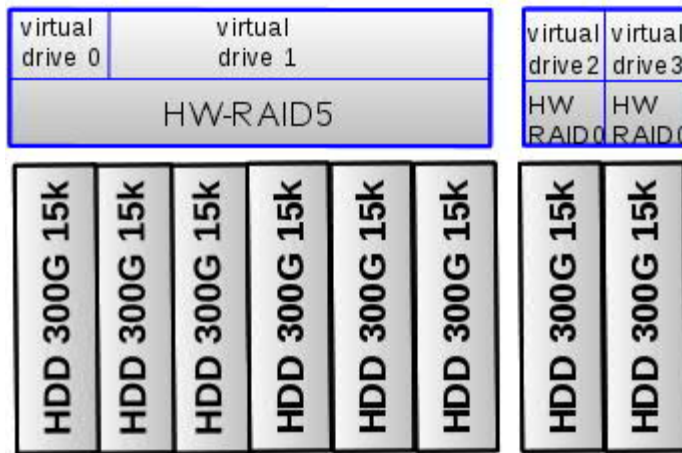


PowerEdge R910

Dell PowerEdge R910 requires the following configuration:


- Hardware-based RAID6 with 10 disks for the operating system and the SAP HANA data
- Hardware-based RAID0 for each individual disk of the 4 virtual drives for the SAP HANA log

Configuration for PowerEdge R910, 512-GB memory, 14 HDDs

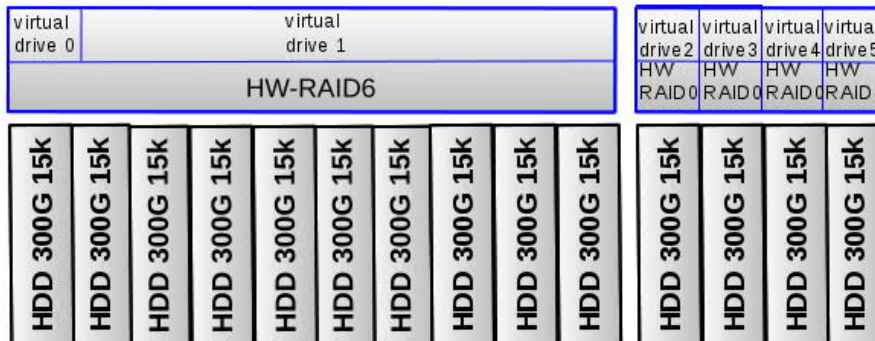

PowerEdge R920

Dell PowerEdge R920 requires the following configuration: hardware-based RAID5 with 10 disks for the operating system, the SAP HANA data, and the SAP HANA log.

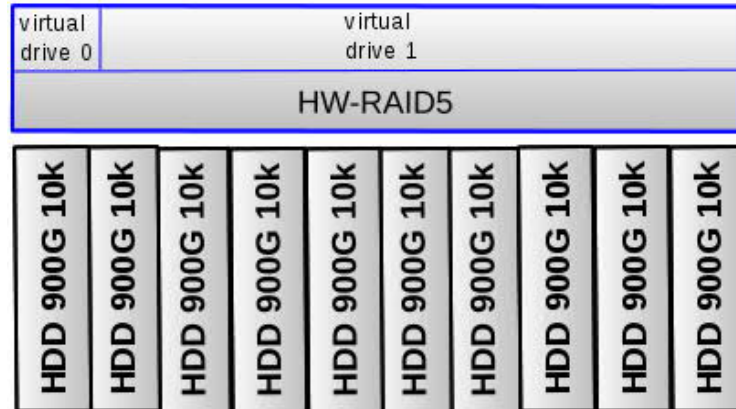


Configuration for PowerEdge R920, 1 TB memory, 10 HDDs

PowerEdge R930

Dell PowerEdge R920 requires the following configuration: hardware-based RAID5 with 9 disks for the operating system, the SAP HANA data, and the SAP HANA log.


Configuration for PowerEdge R930, 64 GB - 1 TB memory, 10 HDDs

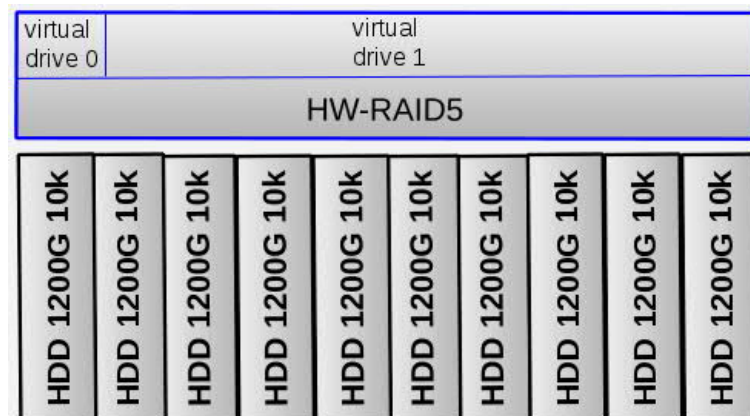


PowerEdge R630, T630, R730, T730

Depending on the main memory, these models can have the following configuration:


- 7 disks (for the operating system, the SAP HANA data, and the SAP HANA log) as RAID5 and 1 disk as a hot spare

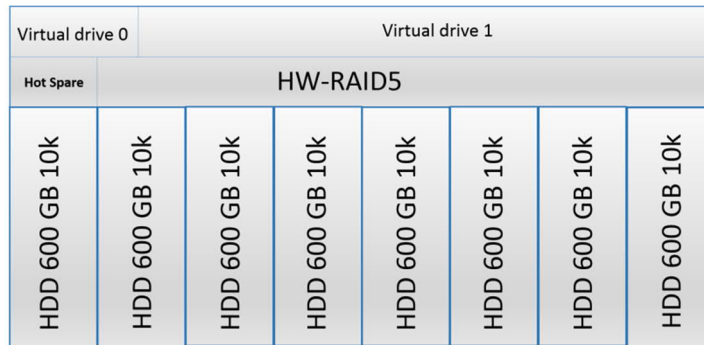

- 4 disks as RAID5 (no hot spare)

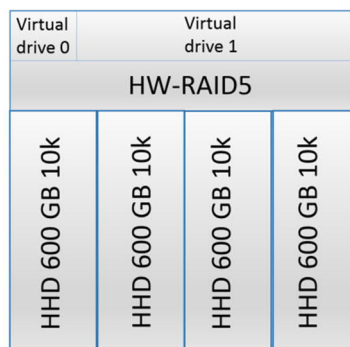

- 6 disks as RAID5 (no hot spare)

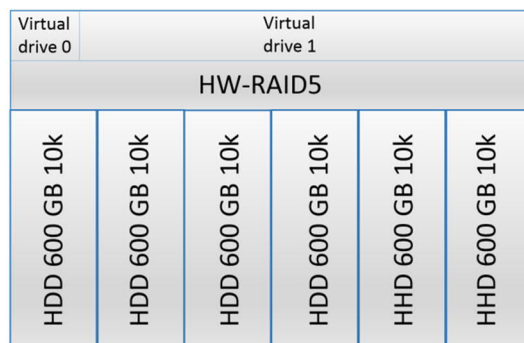

To configure the RAID settings of the H710P or H730P RAID controller, proceed as follows:

1. Boot the machine.
2. When prompted, press **CTRL+R** to enter the RAID adapter configuration utility.
3. If there are configured RAID arrays and virtual drives that do not conform to the certified storage layout as described below, you must delete them as follows:
 8. Select **PERC H710P Adapter**.
 9. Press **F2**.
 10. Select **Clear Config**.
 11. Select **YES**.
4. Select **PERC H710P Adapter**.

5. Press **F2**.
 6. Select **Create New VD**.
 7. Select **RAID Level** and press **Enter**.
 8. R620/T620/R920/R930/R630/T630/R730/T730: Select **RAID-5**.
R910: Select **RAID-6**.
 9. Press **Enter**.
 10. R620/T620: Mark the first 6 disks as part of the RAID 5 array by selecting a disk and pressing **Space**; repeat the action for all 6 disks.
R910: Mark the first 10 disks as part of the RAID 6 array.
R920/R930: Mark the first 9 disks as part of the RAID 5 array.
R630/T630/R730/T730: Mark the first 7 disks as part of the RAID 5 array.
 11. Select **VD Size: 53 GB**.
 12. R620/T620/R910: Select **Advanced Settings** → **Initialize** and press **Space** to mark the drive for initialization.
R920/R930/R630/T630/R730/T730: Select **Configure Hot Spare**.
 13. Select **OK** to confirm initialization.
 14. Select **OK** to create a 53-GB virtual drive. This drive will be used for the Linux root file system and swap space.
 15. R920/R930/R630/T630/R730/T730: In the **Dedicated Hot Spare for Disk Group 0** window, press **Space** to mark the disk and select **OK**.
 16. Select **OK** to confirm completion.
 17. Select **Disk Group 0** and press **F2** to create another virtual drive on this disk group.
 18. Select **Add New VD**.
The remaining disk size is displayed; do not change the value.
 19. R620/T620/R910: Select **Advanced Settings** → **Initialize** and press **Space** to mark the drive for initialization.
R920/R930/R630/T630/R730/T730: Select **Configure Hot Spare**.
 20. R920/R930/R630/T630/R730/T730: In the **Dedicated Hot Spare for Disk Group 0** window, press **Space** to mark the disk and select **OK**.
 21. R620/T620/R910: Select **OK** to confirm initialization.
R920/R930/R630/T630/R730/T730: The RAID configuration is now finished and you can exit the configuration utility. The final RAID configuration for R920/R930 is 1 disk group with 2 virtual drives.
- Note that the remaining steps are only for R620, T620, and R910.
22. Select **OK** to create the larger virtual drive. This drive will be used for the SAP HANA log.
 23. Select **OK** to confirm completion.
 24. Create 2 or 4 RAID-0 drives by repeating the following steps twice (R620 and T620) or four times (R910).
 1. Select **PERC H710P Adapter**.
 2. Press **F2**.
 3. Select **Create New VD**.
 4. Select **RAID Level**, press **Enter**, select **RAID-0**, and then press **Enter**.
 5. Select and mark one of the remaining disks as part of the RAID 0 array.
Do not change the VD size.
 6. Select **Advanced Settings** → **Initialize** and press **Space** to mark the drive for initialization.
 7. Select **OK** to confirm initialization.


The final RAID configuration should be as follows:

- o R620/T620: 3 disk groups with 4 virtual drives
 - o R910: 5 disk groups with 6 virtual drives
25. Press **[ESC]** and select **OK** to exit the RAID configuration utility.
26. Press **[CTRL]+[ALT]+[DEL]** to reboot the machine.

PowerEdge R630, T630, R730, T730 and R930 (Based on Broadwell CPUs)

Depending on the main memory these models can have the following configuration:

- 64GB: 3 x 400GB SSD as RAID5 (no hot spare)
- 128GB: 3 x 400GB SSD as RAID5 (no hot spare)
- 192GB: 3 x 800GB SSD as RAID5 (no hot spare)
- 256GB: 3 x 800GB SSD as RAID5 (no hot spare)
- 384GB: 4 x 800GB SSD as RAID5 (no hot spare)
- 512GB: 5 x 800GB SSD as RAID5 (no hot spare)
- 768GB: 6 x 800GB SSD as RAID5 (no hot spare)
- 1TB: 8 x 800GB SSD as RAID5 (no hot spare)

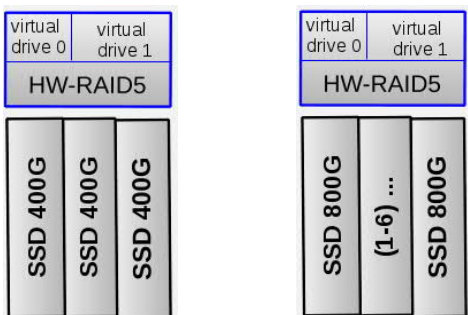


To configure the RAID settings of the H730P RAID controller, proceed as follows:

1. Boot the machine.
2. During the booting process, press **[F11]** and choose **System Setup**.
3. Select **Device Settings** and then **RAID controller settings**
4. Select **Configuration Management**
5. Select **Create Virtual Disk**
6. Choose RAID Level **RAID5**
7. Select **Physical Disks** and choose all available SSD drives. The number of drives depends on the main memory of the machine as documented above.
8. Create one virtual disk with 53 GB capacity. This disk will be used for the Linux root file system and swap space.
9. Choose **Confirm**, then select **Yes** to create the disk.
10. The remaining capacity should be assigned to a second virtual disk. This drive will be used for storing the SAP application data.
11. Select **Create Virtual Disk**
12. Select physical disks from **Free Capacity**
13. **Select Disk Groups**
14. Choose **Disk Group 0: RAID5**
15. Select **Apply Changes**
16. Select **Create Virtual Disk**
17. Choose **Confirm**, then select **Yes** to create the disk.
18. Leave the configuration utility and continue the booting process.

PowerEdge R640, T640, R740, R740xd and R940 (Based on Skylake CPUs)

Depending on the main memory, these models can have the following configuration:

- 96GB: 3 x 400GB or 480GB SSD as RAID5 (no hot spare)
- 192GB: 3 x 400GB or 480GB SSD as RAID5 (no hot spare)
- 384GB: 6 x 400GB or 5 x 480GB or 4 x 800GB SSD or 3 x 960GB as RAID5 (no hot spare)
- 576GB: 9 x 400GB or 7 x 480GB or 5 x 800GB SSD or 4 x 960GB or 3 x 1920GB as RAID5 (no hot spare)
- 768GB: 11 x 400GB or 9 x 480GB or 6 x 800GB SSD or 5 x 960GB or 3 x 1920GB as RAID5 (no hot spare)
- 1.5TB: 20 x 400GB or 17 x 480GB or 11 x 800GB SSD or 9 x 960GB or 5 x 1920GB as RAID5 (no hot spare)
- 3TB: 19 x 800GB SSD or 16 x 960GB or 9 x 1920GB as RAID5 (no hot spare)

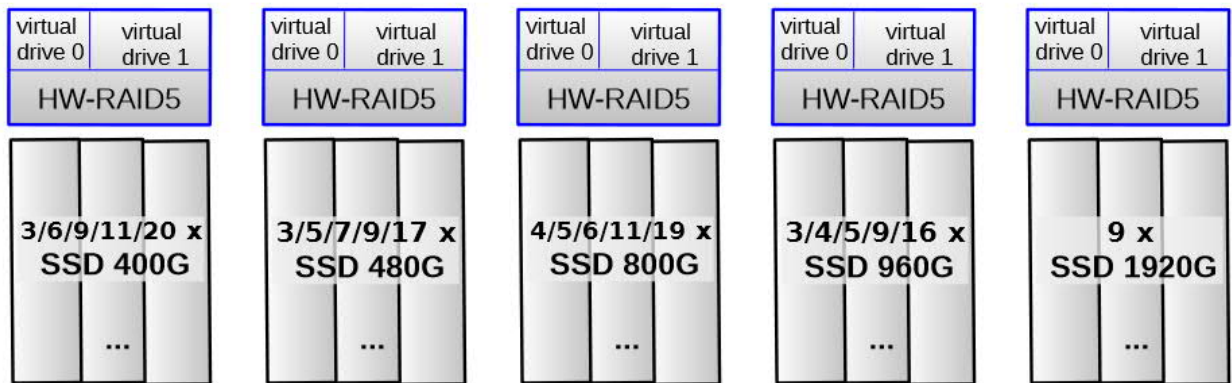

To configure the RAID settings of the H730P/H740P RAID controller, proceed as follows:

1. Boot the machine.
2. During the booting process, press **F11** and choose **System Setup**.
3. Select **Device Settings** and then **RAID controller settings**.
4. Select **Configuration Management**.
5. Select **Create Virtual Disk**.
6. Choose RAID Level **RAID5**.
7. Select **Physical Disks** and choose all available SSD drives. The number of drives depends on the main memory of the machine as documented above.
8. Create one virtual disk with 53 GB capacity. This disk will be used for the Linux root file system and swap space.
9. Choose **Confirm**, then select **Yes** to create the disk.
The remaining capacity should be assigned to a second virtual disk. This drive will be used for storing the SAP application data.
10. Select **Create Virtual Disk**.
11. Select physical disks from **Free Capacity**.
12. Select **Disk Groups**.

-
13. Choose **Disk Group 0: RAID5**.
 14. Select **Apply Changes**
 15. Select **Create Virtual Disk**.
 16. Choose **Confirm**, then select **Yes** to create the disk.
 17. Leave the configuration utility and continue the booting process.

5 Fujitsu Servers

5.1 Defining BIOS Settings

Make sure the following requirements have been met:

- The BIOS boot sequence is set and RAID LUN is at first place "(Bus 01 Dev 00) PCI RAID Adapter".
- The hardware clock is set to the correct time in the UTC-time zone.
- The IPMI IP address for remote management is set. The chosen address is unique in this network segment.

5.2 Configuring Storage

The Fujitsu Server TX300 S6 is equipped with a RAID controller with BBU and 6 x 146 GB 15k disks (internal). There is no external storage.

The Fujitsu Servers TX300 S7/S8 and RX350 S7/S8 are equipped with a RAID controller with BBU and 8x 300 GB 10k disks (internal). There is no external storage.


The Fujitsu Servers RX2540 M1, RX2560 M1 and TX2560 M1 are equipped with a PRAID EP400i controller with BBU and, depending on the memory size, 4x 600 or 6x600 GB 10k disks (internal). There is no external storage.

Once the system is installed, there is a hardware-based RAID 5 with two virtual disks for the operating system and for SAP HANA.


Fujitsu Primergy TX300 S6, TX300 S7/S8, RX350 S7/S8

These servers require the following configuration: hardware-based RAID5 with 6 or 8 disks for the operating system, the SAP HANA data, and the SAP HANA log.

Configuration for TX300 S6, 6 HDDs

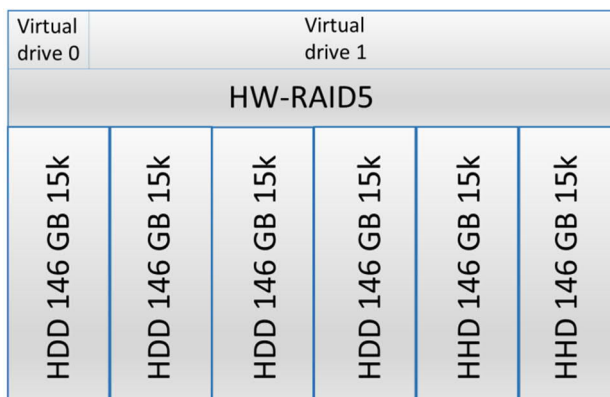

Configuration for TX300 S7/8, RX350 S7/8, 8HDDs

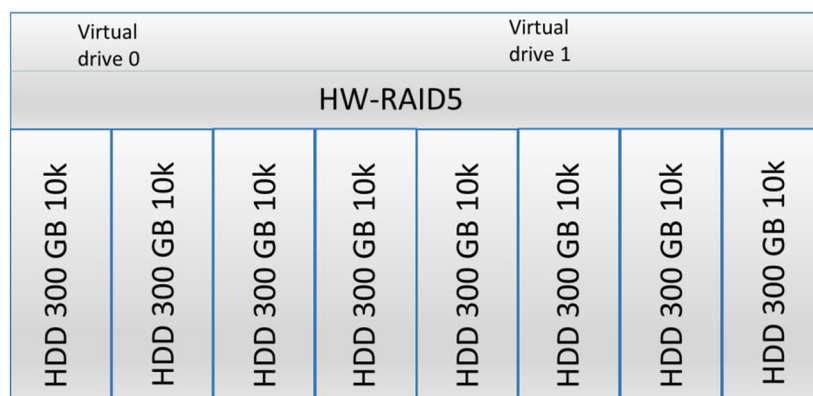

To configure the RAID settings of the RAID controller, proceed as follows:

1. In the UEFI/BIOS, select [System Settings](#).
2. Select [Adapters and UEFI Drivers](#).
3. From the list, select [LSI EFI SAS Driver](#).
4. Select [WebBIOS](#).
5. One RAID controller has already been selected. Keep the selection and choose [Start](#).
6. Select [Configuration Wizard](#).
7. Select [New Configuration](#).
8. Select [Yes](#) to clear the existing configuration.
9. Select [Manual Configuration](#).
10. Select [Redundancy when possible](#).
11. Select [Drive Security Method: No Encryption](#).
12. Select [Data Protection: Disabled](#).
13. Select all 8 drives (slots 0-7), and then select [Add to Array](#).
14. Select [Accept DG](#).
15. Select [Next](#).
16. Select [Add to Span](#).
17. Select [Next](#).
18. Specify the capacity (**53GB**) for the first virtual drive. This drive will be used for the operating system and swap space.
19. Select [Accept](#).
20. Select [Yes](#) for [Write Back with BBU](#) mode.
21. To configure the next virtual drive, select [Back](#).
22. Select [Add to Span](#).
23. Select [Next](#).
24. Select [Update Size](#).
25. Allocate the remaining capacity to the second virtual drive. This drive will be used for storing the SAP application data.
26. Select [Accept](#).


27. Select **Yes** for **Write Back with BBU** mode.
28. Select **Next**.
29. Select **Accept**.
30. Select **Yes** to save the configuration.
31. Select **Cancel** for **SSD Caching**.
32. Select **Yes** to initialize the virtual drives.
33. Make sure that the following properties are selected for the virtual drives:
 - o **RAID Level:5**
 - o **Stripe Size: 256 KB**
 - o **Access: RW**
 - o **Read: Normal**
 - o **Default Write: Write Back with BBU**
 - o **Disable BGI: No**
 - o **I/O: Cached**
 - o **Disk Cache: Disable**
 - o **Advanced Properties, SSD Cache: Disable**

While the virtual drives are being initialized in the background, the installation can proceed.

34. Exit WebBIOS.
35. Exit UEFI/BIOS with **"Y"** to save the settings, and continue with booting the server.

Fujitsu Primergy RX2540 M1, RX2560 M1, TX2560 M1 (based on Intel Haswell CPUs)


These servers require the following configuration: hardware-based RAID5 with 4 or 6 disks SSDs (depending on memory capacity) for the operating system, the SAP HANA data, and the SAP HANA log. A hot spare disk is not included by default but could optionally be added.

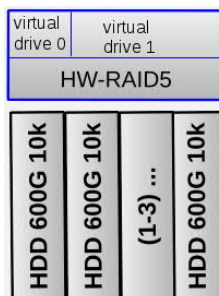

Configuration for RX2540 M1, RX2560 M1, TX2560 M1 with 4-6 disks

Fujitsu Primergy RX2540 M2, RX2560 M2, TX2560 M2 (based on Intel Broadwell CPUs)

These servers require the following configuration: hardware-based RAID5 with 4- 7 SSDs (depending on memory capacity) for the operating system, the SAP HANA data, and the SAP HANA log. A hot spare disk is not included by default but could optionally be added.

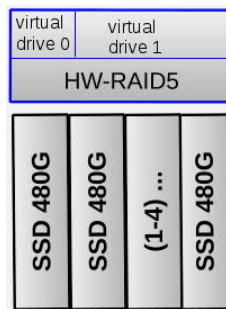


To configure the RAID settings of the RAID controller, proceed as follows:

1. Boot the machine.
2. When prompted, press **CTRL**+**R** to enter the RAID adapter configuration utility.
3. If there are configured RAID arrays and virtual drives that do not conform to the certified storage layout as described below, you must delete them as follows:
 1. Select **PRAID EP240i**.
 2. Press **F2**.
 3. Select **Clear Config**.
 4. Select **YES**.
4. Select **PRAID EP240i**.
5. Press **F2**.
6. Select **Create New VD**.
7. Select **RAID Level** and press **Enter**.
Select **RAID-5**.
8. Press **Enter**.
9. Mark each disk as part of the RAID 5 array by selecting the disk and pressing **Space**; repeat the action for all disks.
10. Select **Size: 53 GB**.
11. Select **OK** to confirm initialization.
12. A 53-GB virtual drive is now created. This drive will be used for the Linux root file system and swap space.
13. Select **Disk Group 0** and press **F2** to create another virtual drive on this disk group.
14. Select **Add New VD**.
The remaining disk size is displayed; do not change the value.
15. Select **OK**.
16. Select **OK** to confirm initialization.
17. The RAID configuration is now finished; press **ESC** to exit the configuration utility and then reboot the machine.

6 Huawei Servers

If you are using a Huawei server, please go to <http://support.huawei.com/enterprise/en/server/huawei-solutions-for-sap-hana-pid-9332560> and search by the code name of your Intel processor, for example, Broadwell, for the relevant SAP HANA appliance guide to find the hardware configuration.

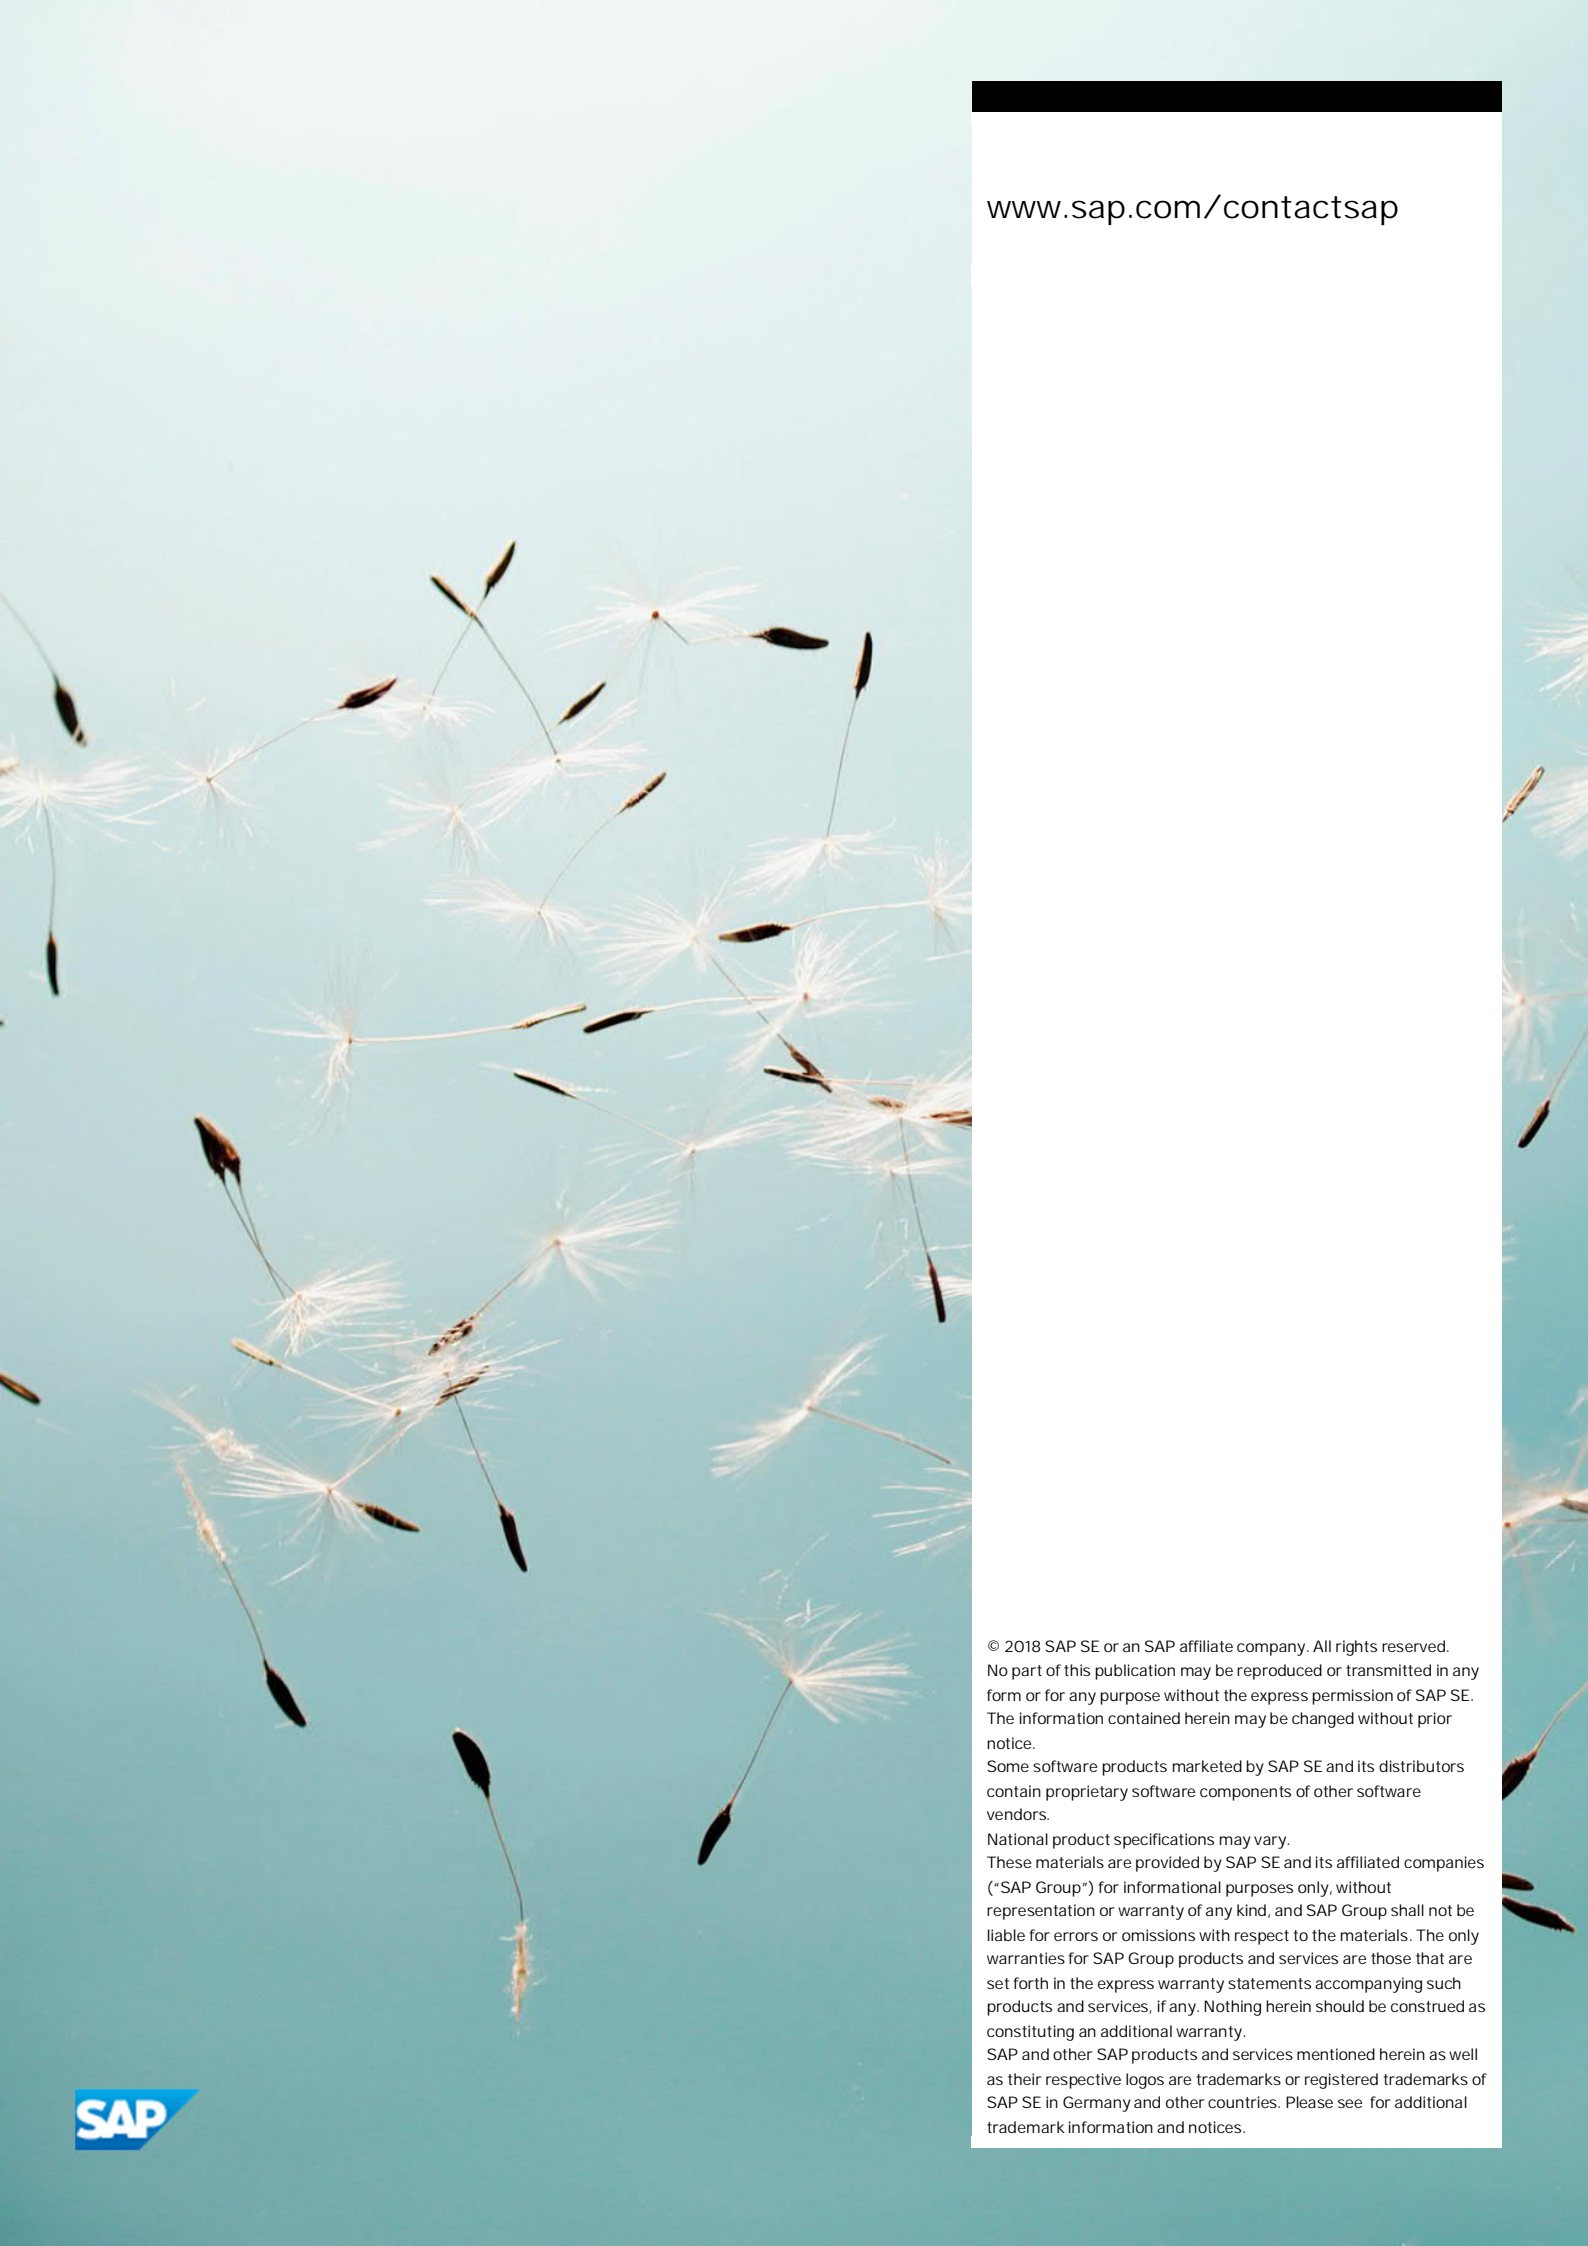

www.sap.com/contactsap

© 2018 SAP SE or an SAP affiliate company. All rights reserved.
No part of this publication may be reproduced or transmitted in any form or for any purpose without the express permission of SAP SE. The information contained herein may be changed without prior notice.

Some software products marketed by SAP SE and its distributors contain proprietary software components of other software vendors.

National product specifications may vary.

These materials are provided by SAP SE and its affiliated companies ("SAP Group") for informational purposes only, without representation or warranty of any kind, and SAP Group shall not be liable for errors or omissions with respect to the materials. The only warranties for SAP Group products and services are those that are set forth in the express warranty statements accompanying such products and services, if any. Nothing herein should be construed as constituting an additional warranty.

SAP and other SAP products and services mentioned herein as well as their respective logos are trademarks or registered trademarks of SAP SE in Germany and other countries. Please see for additional trademark information and notices.